

WOCA Superior Floor Lacquer

– Suitable for residential areas with high wear



Easy and effective. *Naturally*



- Water based
- Fast drying
- NMP Free
- Suitable for residential areas with high wear

Product info

Container: 10L

Gloss: 20 and 40

Consumption: 8-12 m²/L
depending on wood type



Application area

Superior Floor Lacquer can be used on both new/untreated and previously lacquered wood indoors, such as wood and parquet floors, panelling, doors, staircases, natural cork, etc.

Result

It is highly resistant to chemicals and water, as well as offering excellent adhesion to wood surfaces that have previously been sealed. It brings out the colour of the wood, making it ideal for dark species of timber.

Application

Apply the Superior Floor Lacquer undiluted with a roller or brush.

Maintaining and cleaning

Maintenance cleaning with Lacquer Soap. Additional maintenance with Lacquer Care.

How to do...

– WOCA Superior Floor Lacquer




Easy and effective. *Naturally*



1



2

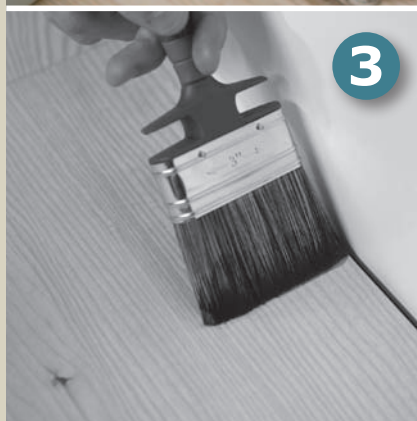

3



4

Tools

Sanding grit, sanding pad, brush or lacquer roller, lacquerstirrer, lacquerbowl.

Clean tools with water and soap.

Superior Floor Lacquer is a low-odour water based product which is particularly hardwearing for higher traffic. It is produced using a special polyurethane co polymer binder with "self-crosslinking" properties that is suitable for wood surfaces, which are subject to heavy wear and tear providing a tough, durable and hardwearing surface. The Superior Floor Lacquer is particularly suitable for areas such as stairs, corridors, etc., where there is a lot of traffic. It is highly resistant to chemicals and water, as well as offering excellent adhesion to wood surfaces that have previously been sealed. It brings out the colour of the wood, making it ideal for dark species of timber. Superior Floor Lacquer can be used on both untreated and previously lacquered wood surfaces indoors, such as wood and parquet floors, panelling, doors, staircases, natural cork, etc.

Previous lacquered:

- 1 Wood that has been lacquered before must be cleaned with WOCA Wood Cleaner to remove dirt, grease, wax and soap residues.

- 2 Always sand surfaces with sanding paper grit 100.

Untreated floors:

- 3 Remove all traces of sanding dust with a vacuum cleaner. Untreated or newly sanded floors also have to be vacuumed thoroughly before lacquering. Apply the Superior Floor Lacquer undiluted with a roller or brush.
- 4 Allow to dry for approx. 90 minutes. (If floor has been primed with white or grey Floor-Primer, then sand after the 1st coat of Superior Floor Lacquer with a grit 120 or sanding pad). Remove all traces of sanding dust with a vacuum cleaner. Apply another coat of Superior Floor Lacquer.

Drying time:

The finished floor can be walked on with care after approx. 4 hours and light objects put back in the room after 24 hours. The freshly sealed floor will be ready for full use after about 8 days (laying rugs, etc.).